Danale大拿

# User manual
# For Android

## 1 Installation

Use mobile phone to visit IP address: http://www.danale.com.

Download and install Danale software. You will see a quick icon , if installed software succeed.

## 2 Register

Procedures below:

1. Double click icon to boot Danale android mobile client.
2. Click **register**.
3. Please input email address and password.
4. Click **Next** icon and input certification information.

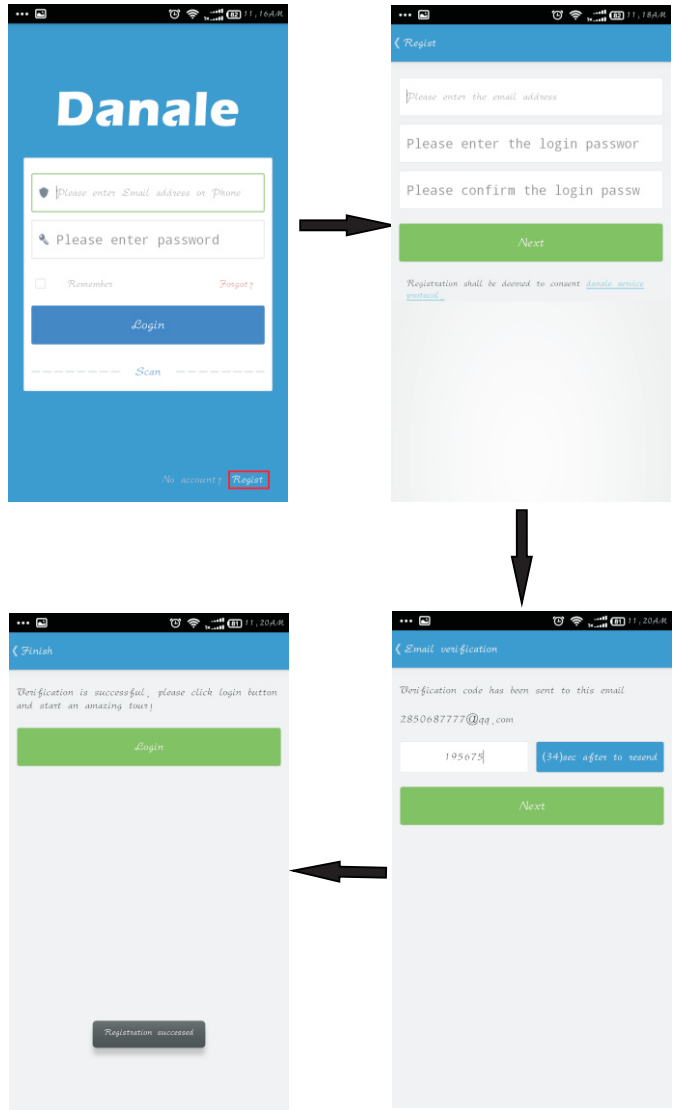

# 3 Add device

1. Login Danale software.

2. There are two ways of adding device, including QR code scanning and Manual add.

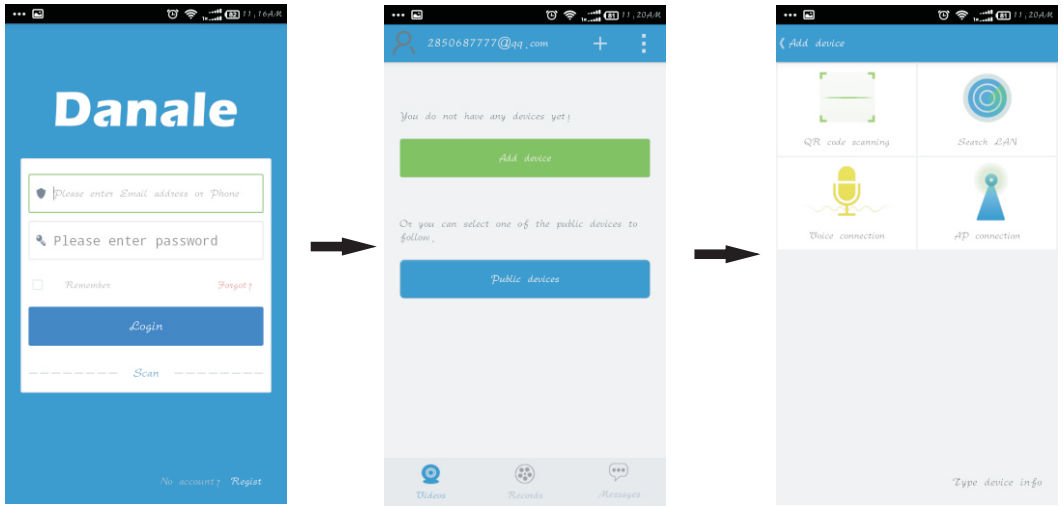


## 3.1 Manually input serial number

Procedures below:

1.Click **Add Device**.

2. Click **type device info**.

3. Input **device name** and **serial number**.

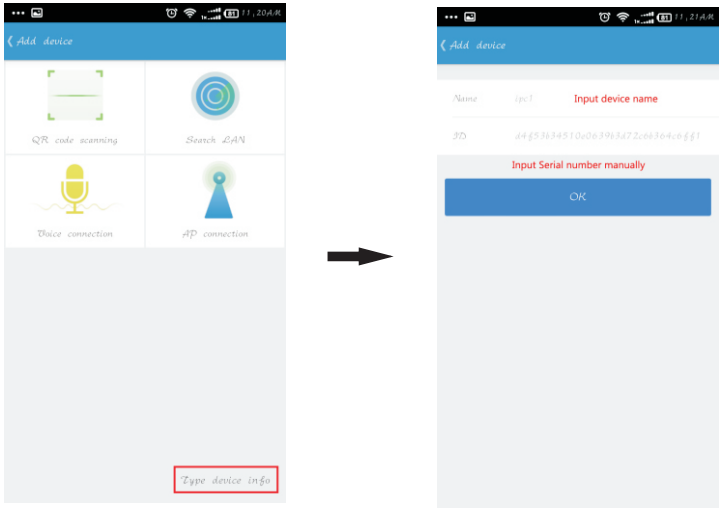


## 3. 2 Scan QR code to get QR code

Procedures below:

1. Click **QR code scan**.

2. Scan QR code.

3. Input **device name**.

4. Preview camera.

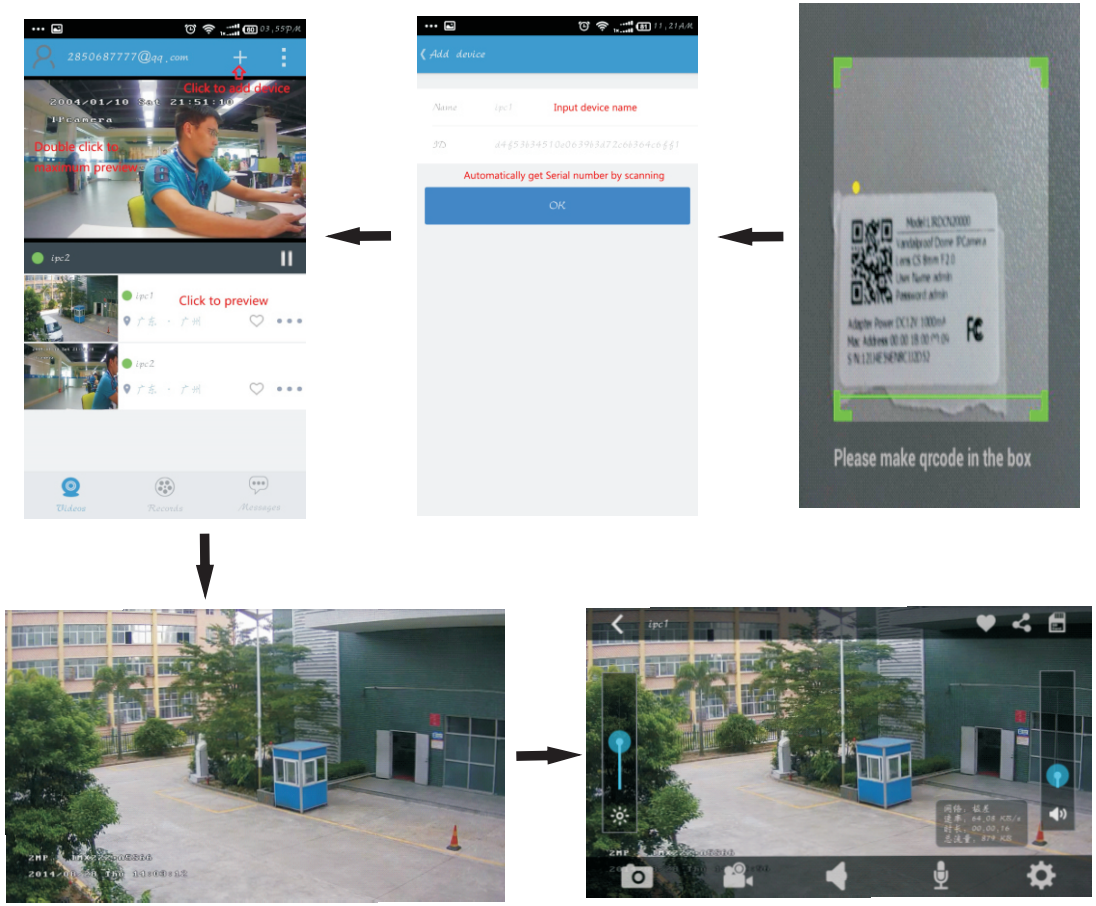

# 4 Share device

Please click red part, and it will pop-up two ways of sharing, including public share and private share.

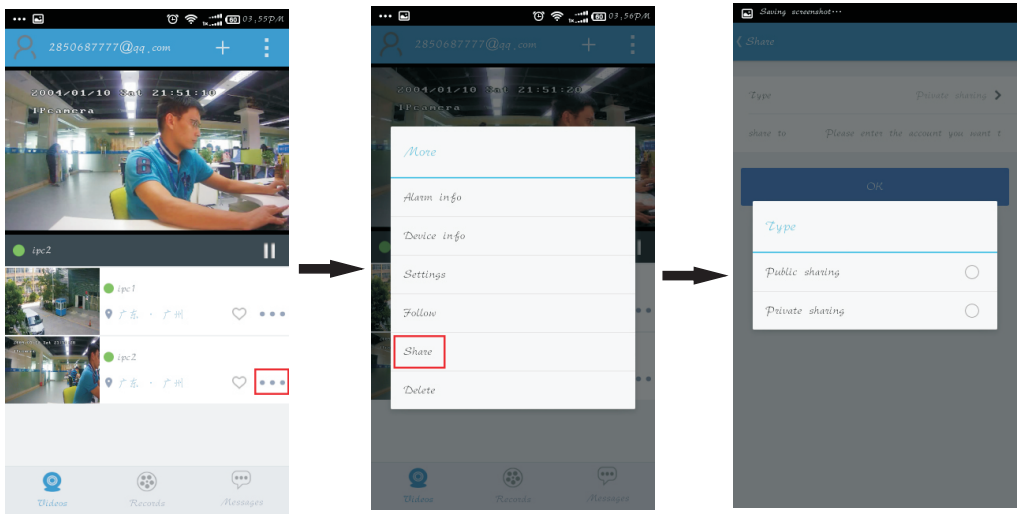


## 4.1 Public share

Procedures below:

1. Click **OK** icon.
2. Click **Public** icon.

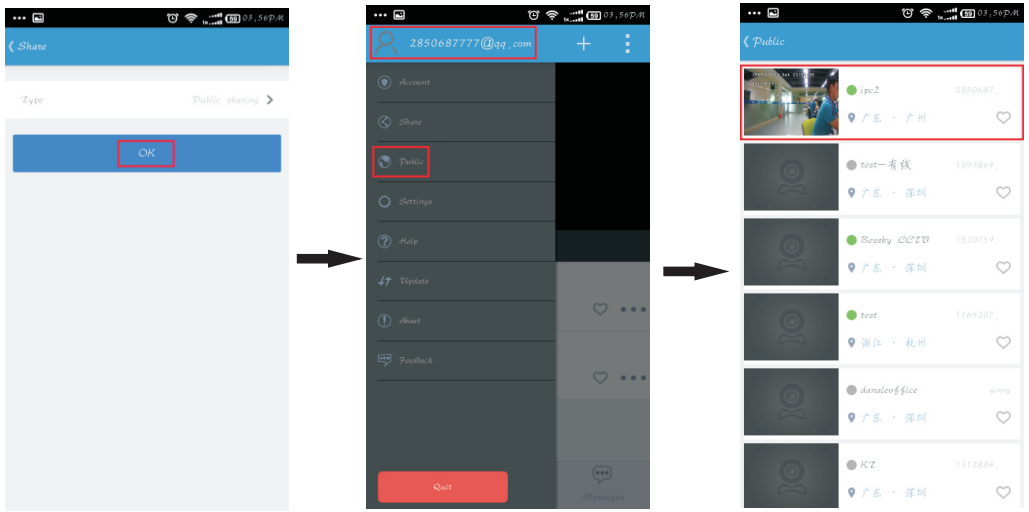


## 4.2 Private share

Procedures below:

1. Input email to be shared.
2. Click **Share** icon.

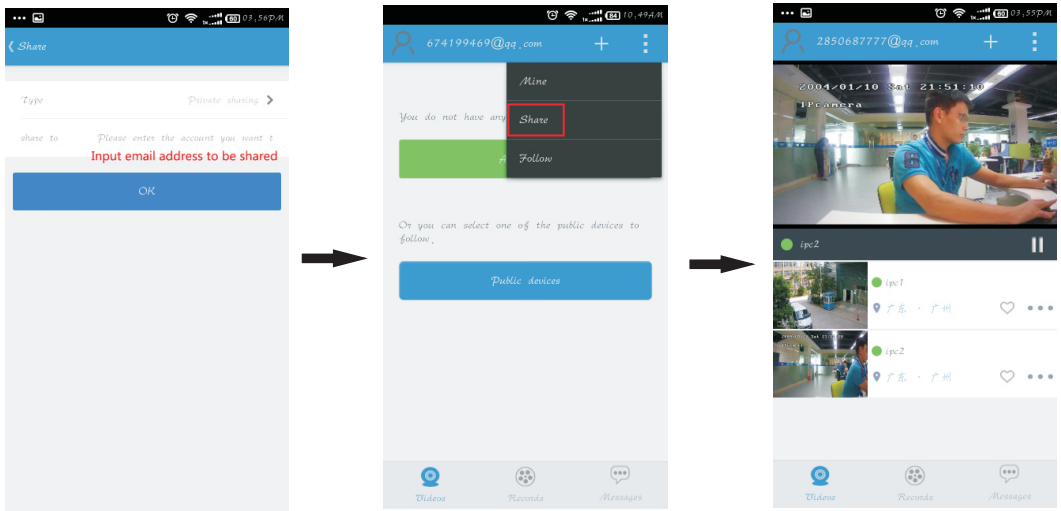

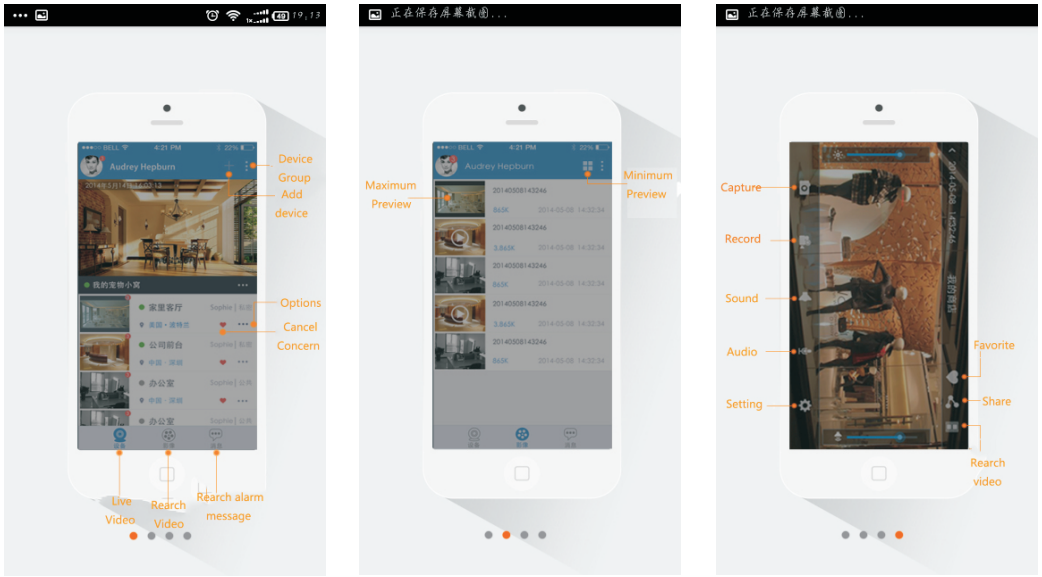
# 5 Function